

1. Product Overview

Feature	Description
Model	Bosch GHO 26-82 D Professional
Voltage	110V
Input Power	710 W
Planing Width	82 mm
Max Cutting Depth	2.6 mm
Max Rebating Depth	9 mm
No-Load Speed	16,500 rpm
Weight	2.8 kg
Blade Type	Double-edged carbide blades
Dust Extraction	Yes, left or right ejection

2. Safety Instructions

- Read all safety warnings before use.
 - Laser-free tool – no risk from beam, but blade contact is dangerous.
 - Wear PPE: safety glasses, ear protection, dust mask, gloves.
 - Ensure stable footing and secure workpieces.
 - Disconnect power when changing blades or clearing debris.
 - Do not operate in damp or explosive environments.
 - Use only Bosch-approved accessories.
-

3. Setup & Operation

Power Connection

- Connect only to 110V supply with proper RCD protection.
- Use 110V transformer on construction sites.

Installing/Removing Planer Blades

1. Disconnect the tool from power.
2. Remove the blade cover using the hex key provided.
3. Insert or replace carbide blade ensuring correct alignment.
4. Re-tighten blade cover securely.

Adjusting Cutting Depth

- Use the front rotary dial to set cutting depth from 0 to 2.6 mm.

Planing

1. Place the tool flat on the surface.
2. Start the planer and allow it to reach full speed.
3. Push smoothly and steadily along the wood grain.

Chip Ejection

- Switch chip ejection left or right using the ejection selector.
- Connect to a vacuum or dust bag where possible.

4. Maintenance

- Clean after every use using a soft brush or compressed air.
- Lubricate moving parts monthly.
- Check blade sharpness regularly and replace if worn.
- Store in a dry, secure location with blade guard in place.

5. Troubleshooting

Problem	Likely Cause	Solution
Planer won't start	No power / faulty cable	Check power supply and fuse
Rough finish	Dull or damaged blade	Replace blade
Excessive vibration	Loose parts or uneven surface	Check tool and workpiece setup
Dust not ejecting properly	Clogged port or full dust bag	Clean ejection chute

6. What's Included

- Bosch GHO 26-82 D Planer
- Blade fitted + 1 spare

- **Wrench/hex key**
- **Dust bag or port adapter**
- **Instruction manual**