

Teleporter Extension Jib 10ft–16ft

User & Safety Manual

1. Product Overview

The Teleporter Extension Jib 10ft–16ft is a heavy-duty telescopic attachment designed to increase the lifting reach of compatible telehandlers. It is suitable for farms, construction sites, and commercial yards where extended reach is required.

2. Technical Specifications

Extension Range	10ft – 16ft (3.0m – 4.9m approx.)
Safe Working Load - 10ft	1,000 kg
Safe Working Load - 13ft	600 kg
Safe Working Load - 16ft	400 kg
Bracket Options	JCB Q Fit, Manitou, Pin & Cone (JCB & Manitou)
Construction	Heavy-duty reinforced steel
Locking System	Multi-position manual pin locking

3. Installation Instructions

- Ensure telehandler is parked on firm, level ground.
- Engage parking brake and switch off engine before fitting attachment.
- Align jib bracket with telehandler carriage.
- Secure using correct locking pins and ensure fully engaged.
- Visually inspect attachment before operation.

4. Operating Instructions

Always consult your telehandler load chart before lifting. Reduce load weight when extending the jib. Lift loads smoothly and avoid sudden movements. Do not exceed stated Safe Working Loads.

5. Safety Guidelines

- Never exceed the Safe Working Load for each extension position.
- Ensure load is securely attached to lifting hook.
- Do not use for lifting personnel.
- Inspect pins, welds, and hook before each use.
- Keep bystanders clear during operation.

6. Maintenance

Regularly inspect for wear, cracks, or damage. Lubricate locking pins as required. Touch up paintwork to prevent corrosion. Store in dry conditions when not in use.